SHARP
Quick Guide
XL-1000H
XL-1100H
COMPACT AUDIO SYSTEM

This Quick Guide will help you to correctly install and operate your system.

If you require any advice or assistance regarding your Sharp product, please visit our web-site www.sharp.co.uk/support. Customers without internet access may telephone 08705 274277 during office hours (or (01) 676 0648 if telephoning from Ireland).

1 Accessories

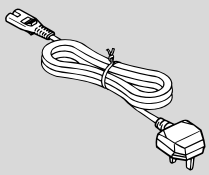

AC power lead × 1

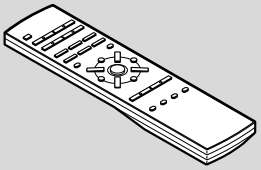

Remote control × 1

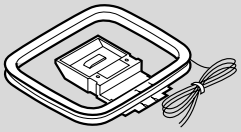

AM loop aerial × 1

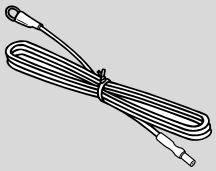

FM aerial × 1

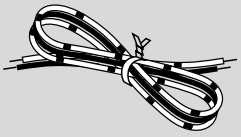

Speaker wire × 2

2 Battery installation of remote control

Use 2 “AAA” size batteries (UM-4, R03, HP-16 or similar).
Batteries are not included.

1 **Remove the battery cover.**

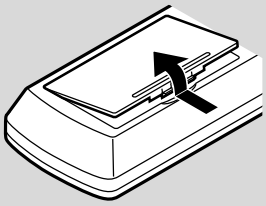

2 **Insert the batteries as shown.**

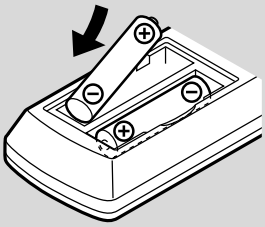

3 **Replace the cover.**

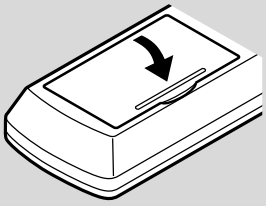

3 System connections

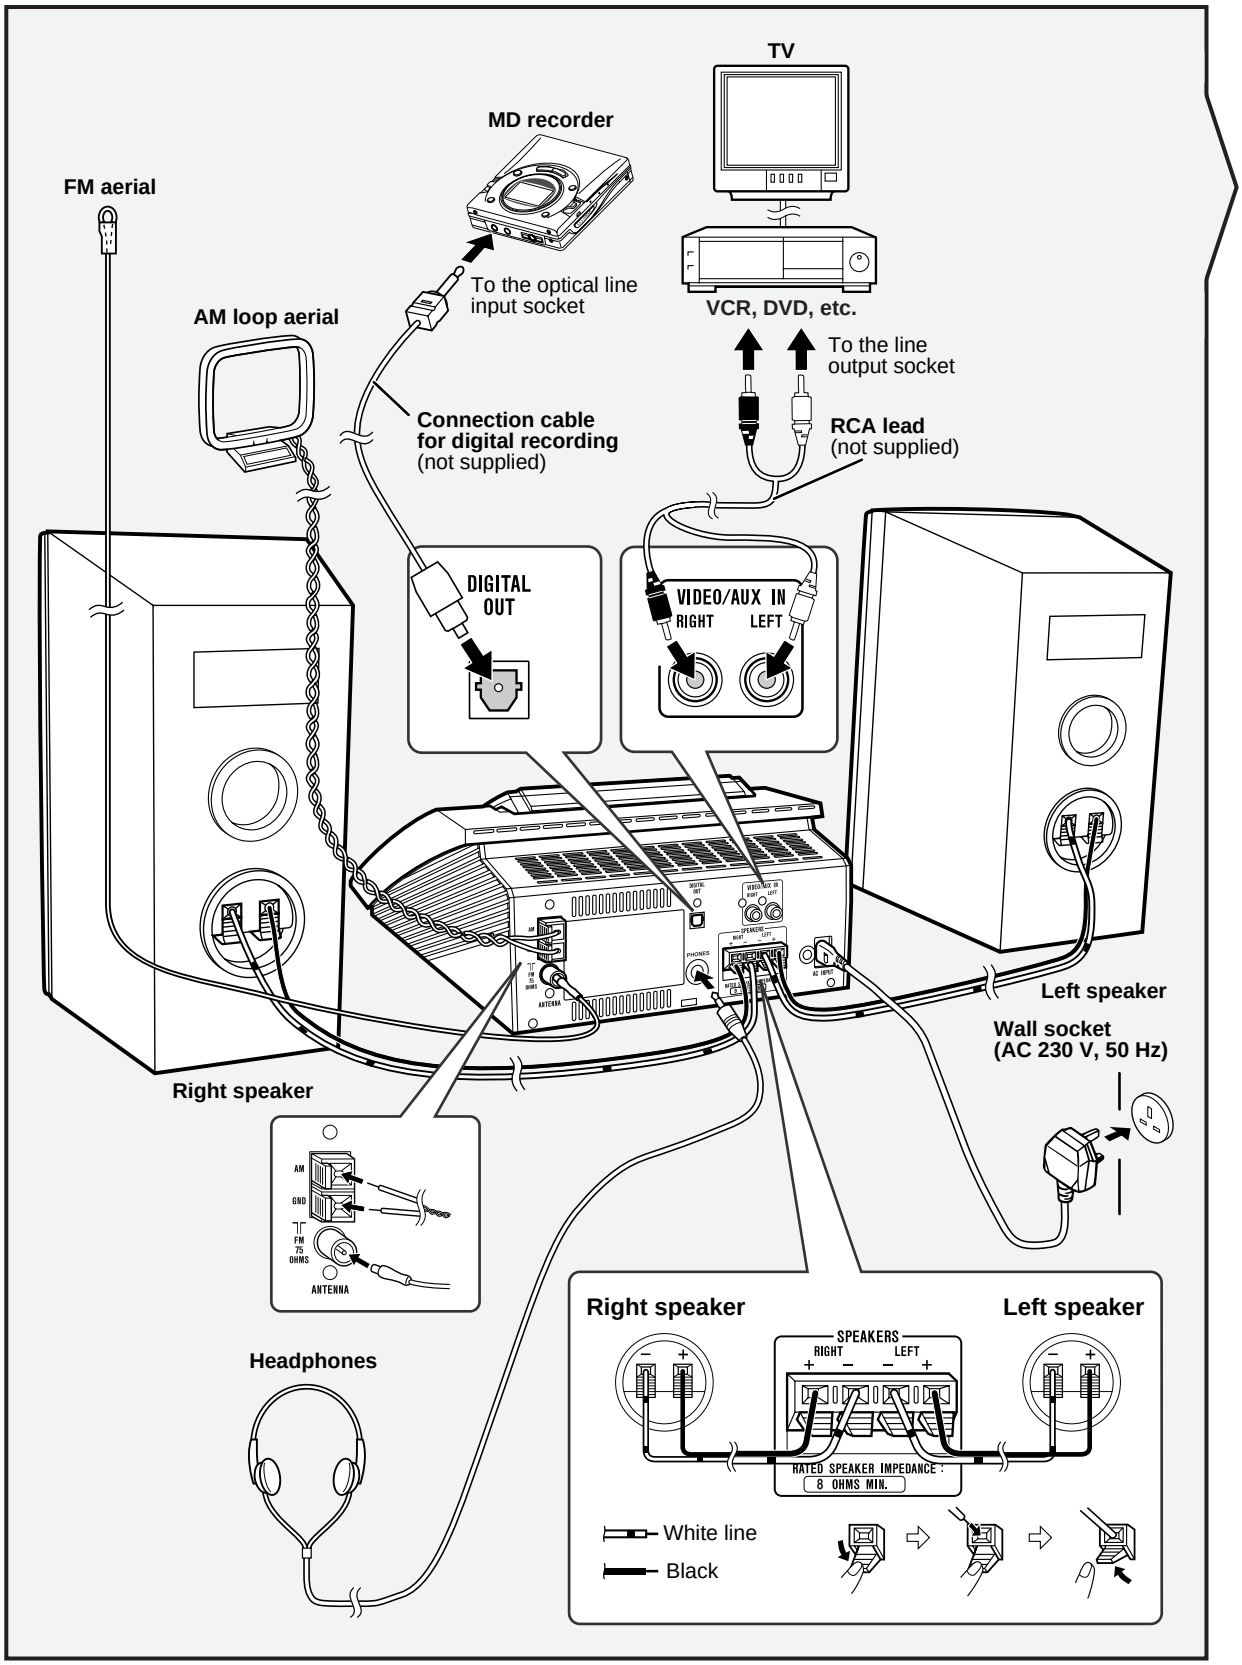

4 Turn on your system

Press the ON/STAND-BY button to turn the power on.

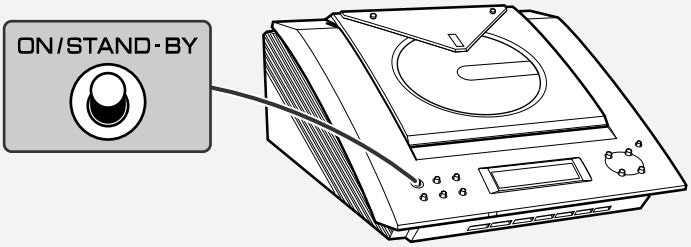

Listening to a CD

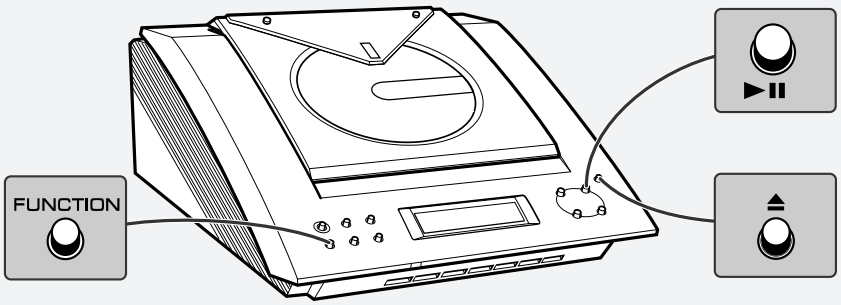

1 FUNCTION

Press the FUNCTION button until “CD STOP” or “NO DISC” appears on the display.

2

Press the ⏏ button to open the CD compartment.

3

Place a CD on the spindle, label side up.

12 cm (5")

8 cm (3")

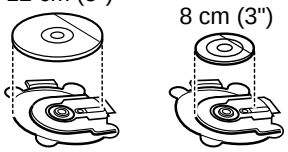

4

Press the ⏏ button to close the CD compartment.



Total number of tracks Total playing time

5

Press the ▶II button to start playback from track 1.

Listening to the radio

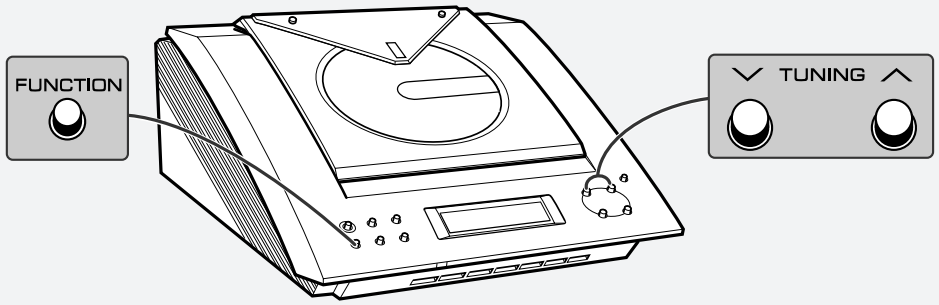

1 FUNCTION

Press the FUNCTION button until “FM” or “AM” appears on the display.

2 TUNING

Press the TUNING (∨ or ∧) button to tune in to the desired station.

When the TUNING button is pressed for more than 0.5 seconds, scanning will start automatically and the tuner will stop at the first receivable broadcast station.

3 FUNCTION

To receive an FM stereo transmission:
Press the FUNCTION button to display the “ST” indicator.

- “∞” will appear when an FM broadcast is in stereo.

FM stereo mode indicator

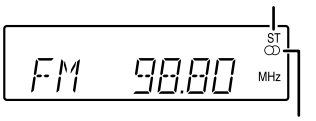

FM stereo receiving indicator

■ If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

If such a problem occurs, do the following:

1. **Set the unit to the stand-by mode and turn the power on again.**
2. **If the unit is not restored in step 1, unplug and plug in the unit, and then turn the power on.**
3. **If neither step 1 nor 2 restores the unit, do the following:**
   - ① Press the ON/STAND-BY button to enter the power stand-by mode.
   - ② Unplug the AC power lead from the AC INPUT socket on the unit.
   - ③ Whilst pressing down the MEMORY/SET button and the ▶II button, plug the AC power lead into the AC INPUT socket on the unit.

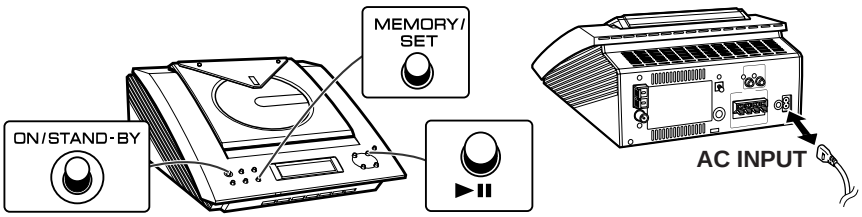

■ Maintenance

Do not touch the laser pickup lens. If fingerprints or dust accumulate on the pickup, clean it gently with a dry cotton swab.